

# Portable Eye/Face Wash

EWP-100



## Description

- Notes : The water stored in the tank needs to be replaced regularly, and the replacement period is 7 days

## Specifications

| Model                   | EWP-100                                                  |
|-------------------------|----------------------------------------------------------|
| Material of eye wash    | polyethylene (PE)                                        |
| Color                   | Yellow / Light Green/ Green                              |
| Features                | No installation , no restrictions on the use environment |
| Volume                  | 10 gallons (38 L)                                        |
| Water usage temperature | 0°C~40°C                                                 |
| Usage time              | ≥15 minutes                                              |
| Flow rate of eye wash   | ≥ 1.5 L/min                                              |
| Dimensions              | L / W / H : 400*413*630 mm                               |

# Portable Eye/Face Wash

EWP-101



## Description

- Notes : The water stored in the tank needs to be replaced regularly, and the replacement period is 7 days

## Specifications

| Model                   | EWP-101                                                  |
|-------------------------|----------------------------------------------------------|
| Material of eye wash    | polyethylene (PE)                                        |
| Color                   | Yellow / Light Green/ Green                              |
| Features                | No installation , no restrictions on the use environment |
| Volume                  | 20 gallons (75 L)                                        |
| Water usage temperature | 0°C~40°C                                                 |
| Usage time              | ≥15 minutes                                              |
| Flow rate of eye wash   | ≥ 1.5 L/min                                              |
| Dimensions              | L / W / H : 550*480*650 mm                               |

# Portable Eye/Face Wash

EWP-102



## Description

- There is a drain valve at the bottom of the trolley
- With universal wheel, can be moved according to the site
- The water stored in the tank needs to be replaced regularly, and the replacement period is 7 days

## Specifications

| Model                   | EWP-102                                                  |
|-------------------------|----------------------------------------------------------|
| Material of eye wash    | polyethylene (PE)                                        |
| Color                   | Yellow / Light Green/ Green                              |
| Features                | No installation , no restrictions on the use environment |
| Eye wash volume         | 20 gallons (75 L)                                        |
| Trolley volume          | 50 gallons (190 L)                                       |
| Water usage temperature | 0°C~40°C                                                 |
| Usage time              | ≥15 minutes                                              |
| Flow rate of eye wash   | ≥ 1.5 L/min                                              |
| Eye wash size           | L / W / H=550*480*650 mm                                 |
| Trolley size            | L / W / H= 690*530*740 mm                                |

# Portable Eye/Face Wash

EWP-103



## Description

- Applicable places: widely used in dust-free workshops, petroleum, chemical, pharmaceutical, fire fighting and other places.
- Optional: You can add mobile trolley and waste water collection tank
- Notes: The water stored in the tank needs to be replaced regularly, and the replacement period is 7 days

## Specifications

| Model                   | EWP-103                          |
|-------------------------|----------------------------------|
| Material of eye wash    | polyethylene (PE)                |
| Function                | wash eyes and face               |
| Volume                  | 8 gallons (30L)/16 gallons (60L) |
| Color                   | Green                            |
| Usage time              | ≥ 15min                          |
| Flow rate of eye wash   | ≥ 1.5 L/min                      |
| Water usage temperature | 0°C ~ 40°C                       |

# Portable pressure hand-held shower/eye wash

EWP-105



## Description


- Applicable places: widely used in dust-free workshops, petroleum, chemical, pharmaceutical, fire fighting and other places.
- Notes: Use the battery to drive the engine, and the motor to drive the pressure pump, which generates pressure in the pump to spray atomized water.
- Product features: with universal wheel, can be moved according to the site
- Remarks: The water stored in the tank needs to be replaced regularly, and the replacement period is 7 days

## Specifications

| Model                   | EWP-105           |
|-------------------------|-------------------|
| Material                | polyethylene (PE) |
| Function                | shower + eye wash |
| Volume                  | 35L               |
| Working pressure        | 0.2 ~ 0.4Mpa      |
| Usage time              | ≥ 15min           |
| Water usage temperature | 0°C ~ 40°C        |

# Wall Mounted Shower and Eye Wash

EEW-317

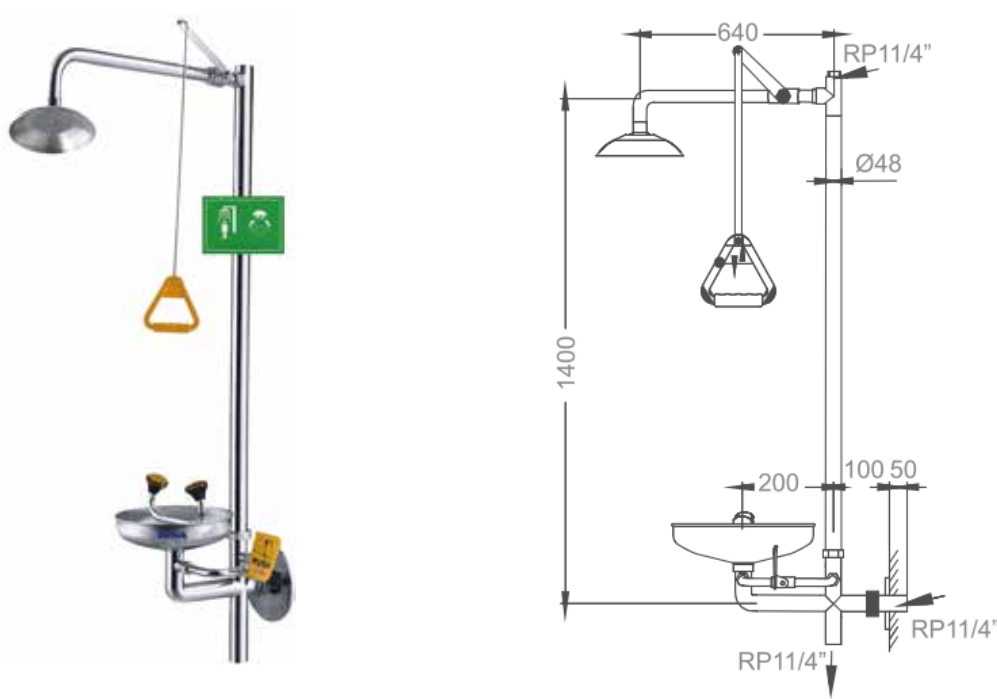

## Specifications

| Model                          | EEW-317                  |
|--------------------------------|--------------------------|
| Material                       | Stainless Steel 304 /ABS |
| Surface finishing              | Sanded                   |
| Function                       | Eye and face washing     |
| Shower & eye wash switch       | SS304 ball valve         |
| Pipe diameter                  | 38/48 mm                 |
| Inlet thread                   | Rp1" 1-1/4", female      |
| Flow rate of body shower       | ≥76 L/min                |
| Flow rate of eye/face wash     | ≥11.4 L/min              |
| Package Dimension (W*D*H) (mm) | 1330*370*270mm           |
| G.W.(kg)                       | 18kg                     |

# Portable pressure hand-held shower/eye wash

EWP-106



## Description

- Notes: The water stored in the tank needs to be replaced regularly, and the replacement period is 7 days
- Application: widely used in dust-free workshops, petroleum, chemical, pharmaceutical, fire fighting and other places.

## Specifications

| Model                   | EWP-106           |
|-------------------------|-------------------|
| Material                | polyethylene (PE) |
| Function                | shower + eye wash |
| Features                | removable trolley |
| Volume                  | 12L               |
| Working pressure        | 0.2 ~ 0.4Mpa      |
| Usage time              | ≥ 15min           |
| Water usage temperature | 0°C ~ 40°C        |

# Portable pressure hand-held shower/eye wash

EWP-107



## Description

- It has a mobile wheel and a water storage tank, free of pipeline installation, and the length of the rod can be adjusted according to the height of the human body.
- Enlarged the water injection port for easy water injection, and there are 2 filters
- The handle of the eye wash switch valve imitates the human hand shape design, with good hand feeling and flexible operation. Can be hung on the rack when not in use.
- Special charger, using intelligent three-stage charging (constant current / constant voltage / maintenance), with short circuit / over current / reverse connection protection function, The charger indicator shows: red-charging, green-full / standby
- 5. Notes: The water stored in the tank needs to be replaced regularly, and the replacement period is 7 days

## Specifications

| Model                   | EWP-107             |
|-------------------------|---------------------|
| Material                | polyethylene (PE)   |
| Function                | shower + eye wash   |
| Features                | rechargeable mobile |
| Volume                  | 20L                 |
| Working pressure        | 0.2 ~ 0.4Mpa        |
| Usage time              | ≥ 15min             |
| Water usage temperature | 0°C ~ 40°C          |

# Removable Single Nozzle Eye Wash

EWM-104



## Description

- With cold and hot water mixing function, it has accident flushing and normal water supply in the laboratory.
- The washing part is equipped with water supply hose to extend the washing range.
- The water supply elbow can be rotated 360 times for easy operation.

## Specifications

| Model            | EWM-104                                                                          |
|------------------|----------------------------------------------------------------------------------|
| Body             | Solid brass                                                                      |
| Function         | eye and face washing                                                             |
| Coating          | High gloss thick plating coating, resistant to chemicals,UV fading and heat      |
| Spray head       | After slow pressure treatment, the water will be foamy to avoid secondary damage |
| Dust cap         | PP materials,automatically turned on by water when used                          |
| Push board       | Push the board by hand, you can wash your eyes and face, easy to use             |
| ball valve       | SS304                                                                            |
| Working pressure | 0.2-0.4Mpa                                                                       |

# Removable Single Nozzle Eye Wash

EWM-105



## Description


- More options:
  - 1.Desk/wall mounted available
  - 2.Single/double spray head(s) available
  - 3.Bottle wash available

## Specifications

| Model                | EWM-105                                                                     |
|----------------------|-----------------------------------------------------------------------------|
| Body                 | Solid brass                                                                 |
| Coating              | High gloss thick plating coating, resistant to chemicals,UV fading and heat |
| Spray head           | Soft rubber,softend water spray for eye protection                          |
| Dust cap             | PP materials,removed automatically when eye wash is operated                |
| Switch               | Automatic trigger locking for easy hand-free use                            |
| Valve                | None-return valve,shut off automatically                                    |
| Hose                 | Length 1.4m,PVC with stainless steel wire braided                           |
| Max.working pressure | 7 Bar                                                                       |

# Removable Single Nozzle Eye Wash

EWM-200

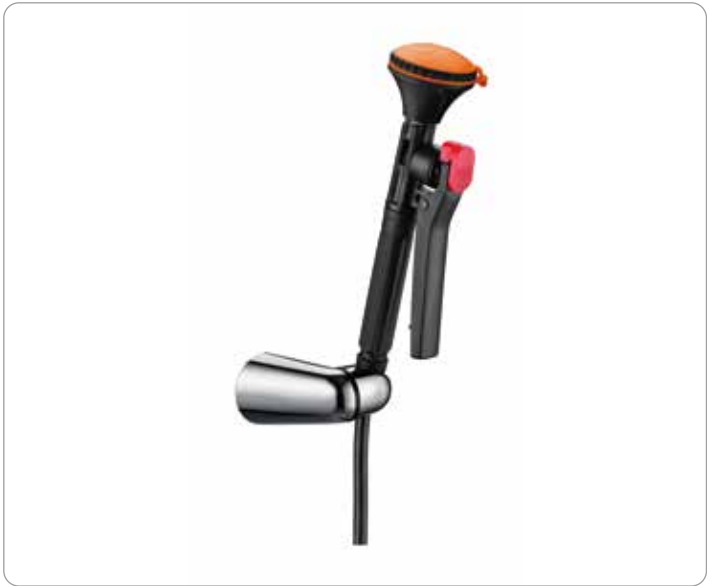

## Description

- When an accident occurs, the eye wash part can be drawn out for use at will, which expands the scope of washing.
- Press the handle to release water, The handle can also be locked for long time flushing

## Specifications

| Model                | EWM-200                                                                               |
|----------------------|---------------------------------------------------------------------------------------|
| Body                 | PP                                                                                    |
| Function             | Eye and face washing                                                                  |
| Water locking switch | the function of water opening and water locking finished one time, convenient to use. |
| Dust cap             | PP materials,removed automatically when eye wash is operated                          |
| Supply Hose          | The length of 1.5 meters,PP materials,Max.working pressure 7 Bar                      |
| Working pressure     | 0.2~0.4Mpa                                                                            |
| Flow of eye wash     | ≥1.5 L/min                                                                            |
| Inner size           | Rp1/2" internal thread                                                                |

# Emergency shower & eye wash room

EEWS-213

## Description

- 1. There is a waste-water collection sink in the eye wash room.
- 2. The eye wash pipeline is provided with a seepage hole to empty the residual water in the eye wash, which is conducive to the cleaning and anti-freezing of the pipeline (part of the water is discharged into the downpipe through the hole during the eye wash without affecting the effect of use).
- 3. The installation position of the inlet and outlet holes of the shower room has reserved the gap, which is used for the winding installation of the electric tracing tropics, to realize the heat preservation of the pipelines, which can be used in the cold region.
- 4. The top of the product is equipped with a lifting ring for easy lifting.
- 5. Can be alone in the wall designated corners. The product comes with universal wheel, which can be moved freely according to the needs of the site, convenient to use.
- 6. Notes : the size and specification of eye wash room can be customized according to the requirements of the site; the inlet part and outlet part are customizable; shutoff valve and filter are proposed to be equipped on the water-supply end E



## Specifications

| Model                  | EEWS-213                                                                                                                  |
|------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Main material          | SS304                                                                                                                     |
| Usage                  | Drenching body and rinsing faces / eyes can be operated separately or simultaneously                                      |
| Inspection window      | Double door type visible glass window                                                                                     |
| Eye wash room size     | L × W × H = 110cmx110cmx295cm                                                                                             |
| Switch ball valve      | SS304                                                                                                                     |
| Eye wash bowl features | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing                          |
| Inlet thread           | Rp1" , female                                                                                                             |
| Outlet thread          | G1-¼", male                                                                                                               |
| Dust cover             | Integrated with the spray head                                                                                            |
| Spray head feature     | Patented design, each spray head equips with one water-flow control valve                                                 |
| Applicable places      | Widely used in dust-free workshops, petroleum, chemical, pharmaceutical, fire protection, power and port and other places |

# Removable Double Nozzle Eye Wash

EWM-201



## Specifications

| Model                         | EWM-201                                                                                                                                  |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| Body                          | SS304                                                                                                                                    |
| Function                      | Eye and face washing                                                                                                                     |
| Surface finishing             | Sanbed                                                                                                                                   |
| Spray head feature            | Patented design, each spray head equips with one water-flow control valve                                                                |
| Dust cover                    | Integrated with the spray head ( not connected by chain )                                                                                |
| Logo                          | The logo of the switch is placed on the front of the push board,which indicate the direction of switch, which is eye-catching and clear. |
| Push board                    | Push the board by hand, you can wash your eyes and face, easy to use                                                                     |
| ball valve                    | SS304                                                                                                                                    |
| Working pressure              | 0.2-0.4Mpa                                                                                                                               |
| Installation                  | Desktop                                                                                                                                  |
| Package Dimension (W*D*H)(mm) | 360*340*170                                                                                                                              |
| G.W.(kg)                      | 3.8                                                                                                                                      |

# Bench Eye Wash

EEW-100



## Description

- With cold and hot water mixing function, it has accident flushing and normal water supply in the laboratory.
- The washing part is equipped with water supply hose to extend the washing range.
- The water supply elbow can be rotated 360 times for easy operation.

## Specifications


| Model            | EEW-100                                                                          |
|------------------|----------------------------------------------------------------------------------|
| Body             | Solid brass                                                                      |
| Function         | eye and face washing                                                             |
| Coating          | High gloss thick plating coating, resistant to chemicals,UV fading and heat      |
| Spray head       | After slow pressure treatment, the water will be foamy to avoid secondary damage |
| Dust cap         | PP materials,automatically turned on by water when used                          |
| Push board       | push the board by hand, you can wash your eyes and face, easy to use             |
| ball valve       | SS304                                                                            |
| Working pressure | 0.2-0.4Mpa                                                                       |

# Vertical emergency eye wash

EEWS-314

## Description

- Product features:After the use of eye wash and face wash is stopped, the water in the pipeline will be drained automatically to achieve the purpose of anti-freezing.
- ★ Note: The inlet part and outlet part are customizable;shut off valve and filter are proposed to be equipped on the water-supply end;

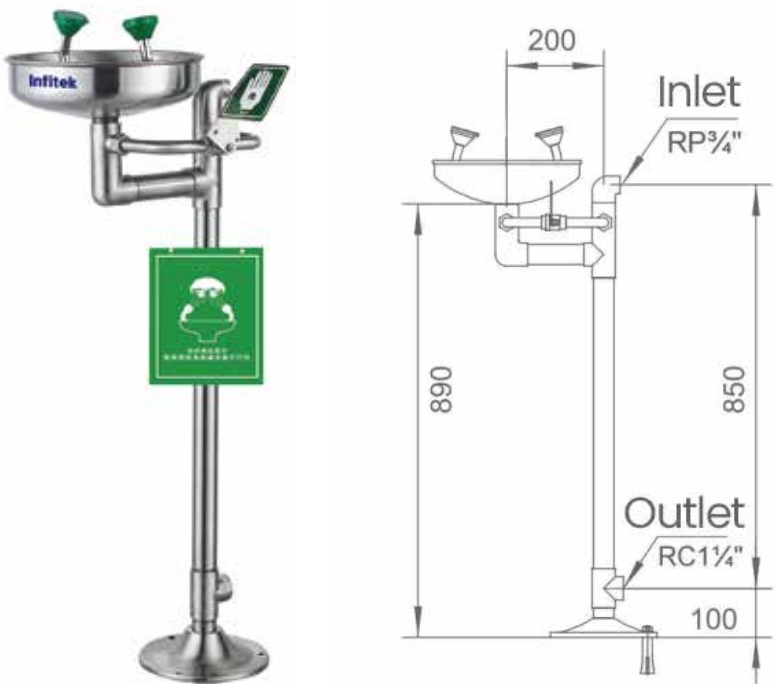

## Specifications


| Model                           | EEWS-314                                                 |
|---------------------------------|----------------------------------------------------------|
| Materials                       | SS304                                                    |
| Surface finishing               | Sanbed                                                   |
| Function                        | Eye and face washing                                     |
| Switching ball valve            | Two-piece ball valve                                     |
| Pipe diameter                   | 42mm                                                     |
| Nominal pressure                | 1.0Mpa                                                   |
| Working pressure                | 0.2-0.4Mpa                                               |
| Test pressure                   | 1.5Mpa                                                   |
| Working environment temperature | 0°C~40°C                                                 |
| Eye wash/face wash water flow   | ≥11.4 L/min                                              |
| Flow of eye wash                | ≥1.5 L/min                                               |
| Eye wash bowl                   | 300mm straight edge design, gather water, prevent splash |
| Dust cover                      | Integrated design of main body, not easy to lose         |
| Inner size                      | Rc3/4" female                                            |
| Outlet size                     | Rc1-1/4" female                                          |
| Inlet height                    | 950mm                                                    |
| Outlet height                   | 100mm                                                    |
| Foot pedal(Optional)            |                                                          |

# Vertical emergency eye wash

EEWS-315

## Description

- The inlet part and outlet part are customizable
- Shut off valve and filter are proposed to be equipped on the water-supply end

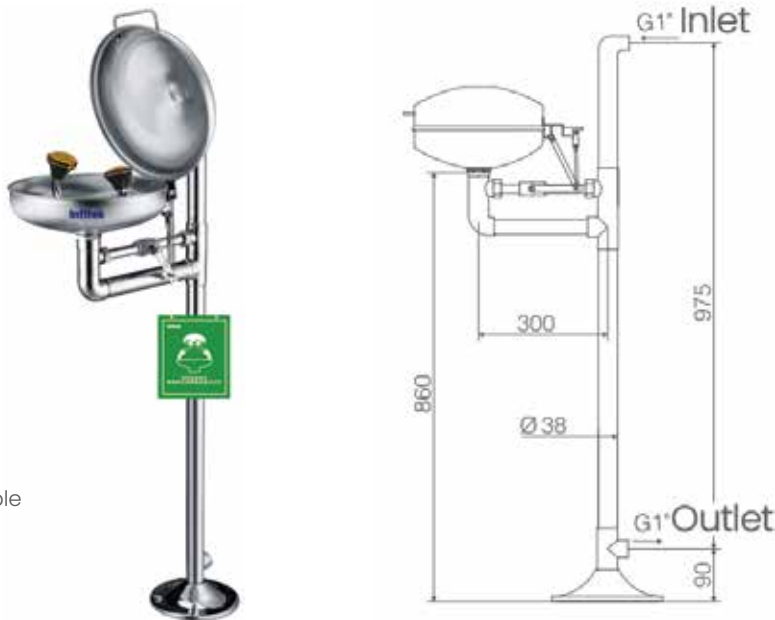

## Specifications


| Model                           | EEWS-315                                                 |
|---------------------------------|----------------------------------------------------------|
| Materials                       | SS304                                                    |
| Surface finishing               | Fine polishing                                           |
| Function                        | Eye and face washing                                     |
| Switching ball valve            | Two-piece ball valve                                     |
| Stainless steel dust cover      | Integrated cover, effective dust isolation               |
| Pipe diameter                   | 38mm                                                     |
| Nominal pressure                | 1.0Mpa                                                   |
| Working pressure                | 0.2-0.4Mpa                                               |
| Test pressure                   | 1.5Mpa                                                   |
| Working environment temperature | 0°C~40°C                                                 |
| Eye wash/face wash water flow   | ≥11.4 L/min                                              |
| Flow of eye wash                | ≥1.5 L/min                                               |
| Eye wash bowl                   | 300mm straight edge design, gather water, prevent splash |
| Dust cover                      | Integrated design of main body, not easy to lose         |
| Inner size                      | Rp1" female                                              |
| Outlet size                     | Rp1" female                                              |
| Inlet height                    | 1065mm                                                   |
| Outlet height                   | 90mm                                                     |

# Vertical emergency eye wash

EEWS-322

## Description

- Combination eye wash stations combine a shower and an eye wash in a single unit.
- The shower provides a full body washdown to prevent injury after being exposed to hazardous materials.
- The eye wash flushes irritants from eyes to treat and prevent eye injuries.
- These stations are used in labs, chemical plants, paper mills, and other environments where there are potentially harmful chemicals or materials. They allow fast emergency access when installed near areas where harmful chemicals or materials are being handled.

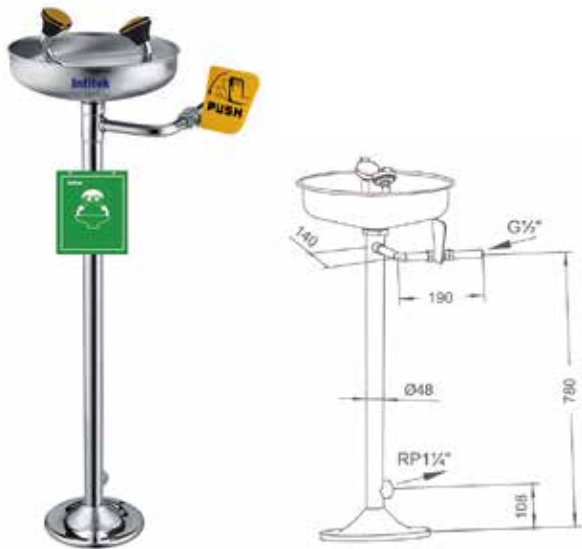

## Specifications

| Model                           | EEWS-322                                                                                                                                           |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| Materials                       | SS304                                                                                                                                              |
| Surface finishing               | fine polishing                                                                                                                                     |
| Function                        | eye and face washing                                                                                                                               |
| Switching ball valve            | two-piece ball valve                                                                                                                               |
| Pipe diameter                   | 48mm/38mm                                                                                                                                          |
| Nominal pressure                | 1.0Mpa                                                                                                                                             |
| Working pressure                | 0.2-0.4Mpa                                                                                                                                         |
| Test pressure                   | 1.5Mpa                                                                                                                                             |
| Working environment temperature | 0°C~40°C                                                                                                                                           |
| Eye wash/face wash water flow   | ≥11.4 L/min                                                                                                                                        |
| Flow of eye wash                | ≥1.5 L/min                                                                                                                                         |
| Eye wash bowl                   | 300mm straight edge design, gather water, prevent splash                                                                                           |
| Dust cover                      | integrated design of main body, not easy to lose                                                                                                   |
| Inner size                      | G1/2" male                                                                                                                                         |
| Outlet size                     | Rp1-1/4" female                                                                                                                                    |
| Inlet height                    | 780mm/753mm                                                                                                                                        |
| Outlet height                   | 108mm/86mm                                                                                                                                         |
| Product features                | After the use of eye wash and face wash is stopped,the water in the pipeline will be drained automatically to achieve the purpose of anti-freezing |
| Package Dimension (W*D*H)(mm)   | 800*380*170                                                                                                                                        |
| G.W.(kg)                        | 6.5                                                                                                                                                |

# Vertical Emergency Eye Wash

EEWS-327

## Description

- After the use of eye wash and face wash is stopped, the water in the pipeline will be drained automatically to achieve the purpose of anti-freezing
- The inlet part and outlet part are customizable
- Shut off valve and filter are proposed to be equipped on the water-supply end
- Stainless steel foot treadle can be added to control the eye wash switch.



## Specifications

| Model                           | EEWS-327                                                 |
|---------------------------------|----------------------------------------------------------|
| Materials                       | SS304                                                    |
| Surface finishing               | Fine polishing                                           |
| Function                        | Eye and face washing                                     |
| Switching ball valve            | Two-piece ball valve                                     |
| Pipe diameter                   | 48mm/38mm                                                |
| Nominal pressure                | 1.0Mpa                                                   |
| Working pressure                | 0.2-0.4Mpa                                               |
| Test pressure                   | 1.5Mpa                                                   |
| Working environment temperature | 0°C~40°C                                                 |
| Eye wash/face wash water flow   | ≥11.4 L/min                                              |
| Flow of eye wash                | ≥1.5 L/min                                               |
| Eye wash bowl                   | 300mm straight edge design, gather water, prevent splash |
| Dust cover                      | Integrated design of main body, not easy to lose         |
| Inner size                      | G1/2" male                                               |
| Outlet size                     | Rp1-1/4" female                                          |
| Inlet height                    | 780mm/753mm                                              |
| Outlet height                   | 108mm/86mm                                               |

Wall Mounted Eye Wash

EEW-300



Description


- This product can be used in field of petroleum, chemical, laboratory, medical treatment etc., and flushing the chemistry liquid splattered eye and face rapidly, so reduce the level of injury to the minimum.
- Notes : the inlet part and outlet part are customizable; shutoff valve and filter are proposed to be equipped on the water-supply end.

Specifications

| Model                              | EEW-300             |
|------------------------------------|---------------------|
| Material                           | stainless steel 304 |
| Surface finishing                  | fine-polished       |
| Function                           | wash eyes and face  |
| Switch ball valve                  | SS304               |
| Nominal pressure                   | 1.0 Mpa             |
| Working pressure                   | 0.2~0.4 Mpa         |
| Testing pressure                   | 1.5 Mpa             |
| Temperature on working environment | 0°C~40°C            |
| Flow rate of eye/face wash         | ≥ 11.4 L/min        |
| Inlet thread                       | G1-1/4" , male      |
| Outlet thread                      | Rp 1-1/4" , female  |
| Package Dimension (W*D*H) (mm)     | 360*330*270         |
| G.W.(kg)                           | 5.5                 |

Wall Mounted Eye Wash

EEW-320

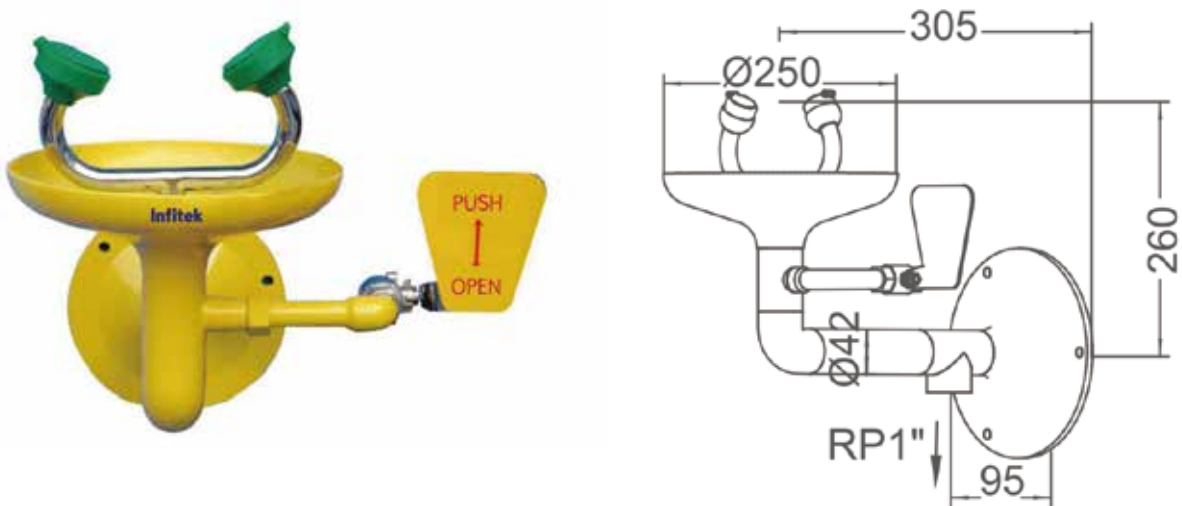

Description

- ABS Hand Push:warning yellow more conspicuous
- Water Supply:304 stainless steel casting ensure water smooth
- Eye Wash Bowl:reasonable angle automatic flip more convenient
- Water Outlet:reasonable recycling waste water ensure tidy

Specifications

| Model                                          | EEW-320                  |
|------------------------------------------------|--------------------------|
| Material                                       | stainless steel 304/ ABS |
| Surface finishing                              | glossy epoxy coated      |
| Function                                       | wash eyes and face       |
| Switch ball valve                              | SS304                    |
| Nominal pressure                               | 1.0 Mpa                  |
| Working pressure                               | 0.2~0.4 Mpa              |
| Testing pressure                               | 1.5 Mpa                  |
| Temperature requirement on working environment | 0°C~40°C                 |
| Flow rate of eye/face wash                     | ≥ 11.4 L/min             |
| Inlet thread                                   | Rp 1/2" , female         |
| Outlet thread                                  | Rp 1" , female           |

# Emergency shower & eye wash room

EEWS-211



## Description

- The size and specification of eye wash room can be customized according to the requirements of the site
- The inlet part and outlet part are customizable
- Shutoff valve and filter are proposed to be equipped on the water-supply end

## Specifications

| Model                  | EEWS-211                                                                                         |
|------------------------|--------------------------------------------------------------------------------------------------|
| Main material          | SS304                                                                                            |
| Usage                  | Drenching body and rinsing faces / eyes can be operated separately or simultaneously             |
| Eye wash room size     | L × W × H = 110cmx114cmx240cm                                                                    |
| Switch ball valve      | SS304                                                                                            |
| Eye wash bowl features | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing |
| Inlet thread           | G1-½", male                                                                                      |
| Outlet thread          | G1-½", male                                                                                      |
| Dust cover             | Integrated with the spray head                                                                   |
| Spray head feature     | Patented design, each spray head equips with one water-flow control valve                        |

# Wall Embedded Emergency Shower & Eye Wash Room

EEWS-316



## Description

- The embedded eye wash is isolated from dust pollution, uses space efficiently, Suitable for aseptic workshops, hospitals, high-end laboratories and other environments.

## Specifications

| Model                      | EEWS-316                                                   |
|----------------------------|------------------------------------------------------------|
| Material                   | Stainless steel 304                                        |
| Installation               | Wall embedded (save space)                                 |
| Function                   | shower+eye wash                                            |
| Shower head                | stainless steel 304                                        |
| Eye wash sprayer head      | ABS engineering plastic                                    |
| Flow rate of body shower   | ≥ 76 L/min                                                 |
| Flow rate of eye/face wash | ≥ 11.4 L/min                                               |
| Flow rate of eye wash      | ≥ 1.5 L/min                                                |
| Sprayer head               | Each sprayer head equips with one water-flow control valve |
| Inlet thread               | Rp 1" ,female                                              |
| Outlet thread              | Rp 1-1/4" ,female                                          |

# Eye/Face Wash and Shower Combination Station

## EEWS-310


### Description

- Combination eye wash stations combine a shower and an eye wash in a single unit. The shower provides a full body washdown to prevent injury after being exposed to hazardous materials. The eye wash flushes irritants from eyes to treat and prevent eye injuries.
- These stations are used in labs, chemical plants, paper mills, and other environments where there are potentially harmful chemicals or materials. They allow fast emergency access when installed near areas where harmful chemicals or materials are being handled.

### Specifications

| Model                                          | EEWS-310                                                                                                      |
|------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| Material                                       | Stainless Steel 304                                                                                           |
| Surface finishing                              | sanded                                                                                                        |
| Assembling feature                             | the“Union”allows easier pipe connection and disconnection                                                     |
| Usage                                          | drenching body and rinsing faces / eyes can be operated separately or simultaneously                          |
| Shower & eye wash switch                       | SS304 ball valve                                                                                              |
| Shower head                                    | spinning-formed with curled rim, diameter 250 mm                                                              |
| Pipe diameter                                  | 38 mm                                                                                                         |
| Nominal pressure                               | 1.0 Mpa                                                                                                       |
| Working pressure                               | 0.2~0.4 Mpa                                                                                                   |
| Testing pressure                               | 1.5 Mpa                                                                                                       |
| Temperature requirement on working environment | 0°C~40°C                                                                                                      |
| Flow rate of body shower                       | ≥76 L/min                                                                                                     |
| Flow rate of eye/face wash                     | ≥11.4 L/min                                                                                                   |
| Flow rate of eye wash                          | ≥1.5 L/min                                                                                                    |
| Eyewash bowl features                          | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing              |
| Dust cover feature                             | integrated with the spray head ( not connected by chain )                                                     |
| Spray head feature                             | patented design, each spray head equips with one water – flow control valve                                   |
| Inlet thread                                   | Rp1” ,female                                                                                                  |
| Outlet thread                                  | Rp1” ,female                                                                                                  |
| Inlet height ( from above the floor )          | 1570 mm                                                                                                       |
| Outlet height ( from above the floor )         | 90 mm                                                                                                         |
| Distance between spray heads                   | 170 mm                                                                                                        |
| Water pattern coverage                         | at the height of 1524 mm above floor, the water pattern covers a circular area of at least 510 mm in diameter |

Optional anti-scalding valve:For details, please refer to the last page of the color page.

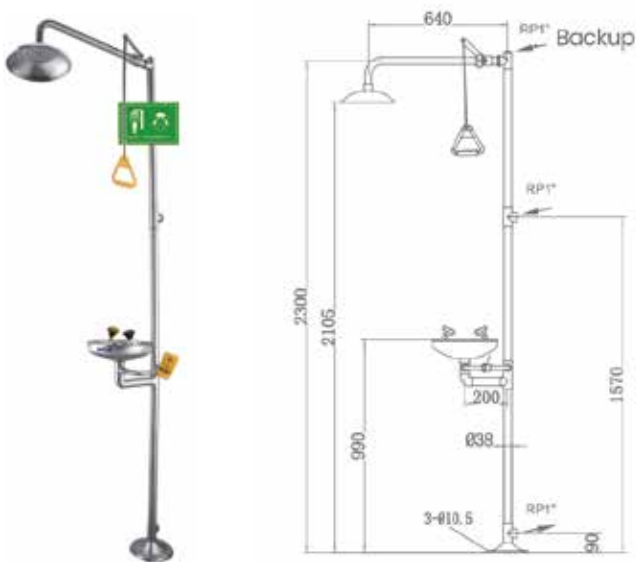

# Eye/Face Wash and Shower Combination Station

## EEWS-311

### Description

- Combination eye wash stations combine a shower and an eye wash in a single unit. The shower provides a full body washdown to prevent injury after being exposed to hazardous materials. The eye wash flushes irritants from eyes to treat and prevent eye injuries.
- These stations are used in labs, chemical plants, paper mills, and other environments where there are potentially harmful chemicals or materials. They allow fast emergency access when installed near areas where harmful chemicals or materials are being handled.

### Specifications


| Model                                          | EEWS-311                                                                                                                            |
|------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Material                                       | Stainless Steel 304                                                                                                                 |
| Surface finishing                              | sanded                                                                                                                              |
| Usage                                          | drenching body and rinsing faces / eyes can be operated separately or simultaneously                                                |
| Shower & eye wash switch                       | SS304 ball valve                                                                                                                    |
| Shower head                                    | spinning-formed with curled rim, diameter 250 mm                                                                                    |
| Pipe diameter                                  | 42 mm                                                                                                                               |
| Nominal pressure                               | 1.0 Mpa                                                                                                                             |
| Working pressure                               | 0.2~0.4 Mpa                                                                                                                         |
| Testing pressure                               | 1.5 Mpa                                                                                                                             |
| Temperature requirement on working environment | 0°C~40°C                                                                                                                            |
| Flow rate of body shower                       | ≥76 L/min                                                                                                                           |
| Flow rate of eye/face wash                     | ≥11.4 L/min                                                                                                                         |
| Flow rate of eye wash                          | ≥1.5 L/min                                                                                                                          |
| Eyewash bowl features                          | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing                                    |
| Dust cover                                     | integrated with the spray head ( not connected by chain )                                                                           |
| Spray head feature                             | patented design, each spray head equips with one water – flow control valve                                                         |
| Inlet thread                                   | Rc 1”,female                                                                                                                        |
| Outlet thread                                  | Rc1-1/4”,female                                                                                                                     |
| Inlet height ( from above the floor )          | 1540 mm                                                                                                                             |
| Outlet height ( from above the floor )         | 100 mm                                                                                                                              |
| Distance between spray heads                   | 170 mm                                                                                                                              |
| Water pattern coverage                         | water pattern coverage at the height of 1524 mm above floor,the water pattern covers a circular area of at least 510 mm in diameter |

Optional anti-scalding valve:For details, please refer to the last page of the color page.



# Eye/Face wash and Shower combination station

## EEWS-311R

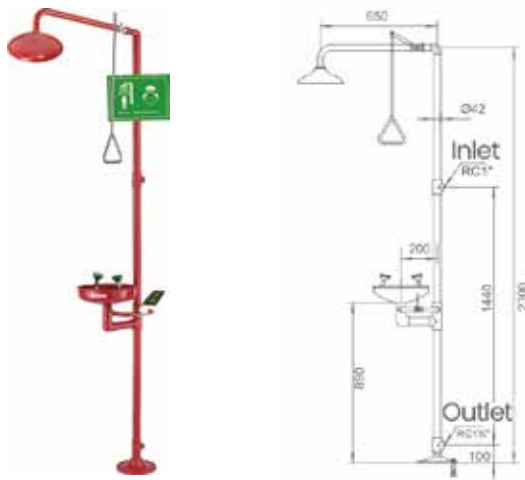

### Description

- The inlet parts and outlet parts are customizable
- Shutoff valve and filter are proposed to be equipped on the water-supply end
- Stainless steel – made foot treadle is optional as eye wash switch

### Specifications

| Model                                          | EEWS-311R                                                                                                                           |
|------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Material                                       | Stainless Steel 304                                                                                                                 |
| Surface finishing                              | glossy epoxy coated                                                                                                                 |
| Usage                                          | drenching body and rinsing faces / eyes can be operated separately or simultaneously                                                |
| Shower & eye wash switch                       | SS304 ball valve                                                                                                                    |
| Shower head                                    | spinning-formed with curled rim, diameter 250 mm                                                                                    |
| Pipe diameter                                  | 42 mm                                                                                                                               |
| Nominal pressure                               | 1.0 Mpa                                                                                                                             |
| Working pressure                               | 0.2-0.4 Mpa                                                                                                                         |
| Testing pressure                               | 1.5 Mpa                                                                                                                             |
| Temperature requirement on working environment | 0°C~40°C                                                                                                                            |
| Flow rate of body shower                       | ≥76 L/min                                                                                                                           |
| Flow rate of eye/face wash                     | ≥11.4 L/min                                                                                                                         |
| Flow rate of eye wash                          | ≥1.5 L/min                                                                                                                          |
| Eyewash bowl features                          | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing                                    |
| Eyewash bowl cover                             | SS304, combined eye wash switch and bowl cover in one, performs better on dust prevention                                           |
| Spray head feature                             | patented design, each spray head equips with one water – flow control valve                                                         |
| Inlet thread                                   | Rc 1",female                                                                                                                        |
| Outlet thread                                  | Rc1-½",female                                                                                                                       |
| Inlet height ( from above the floor )          | 1540 mm                                                                                                                             |
| Outlet height ( from above the floor )         | 100 mm                                                                                                                              |
| Distance between spray heads                   | 170 mm                                                                                                                              |
| Water pattern coverage                         | water pattern coverage at the height of 1524 mm above floor,the water pattern covers a circular area of at least 510 mm in diameter |

Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Eye/Face Wash and Shower Combination Station

## EEWS-311Y



### Description

Combination eye wash stations combine a shower and an eye wash in a single unit. The shower provides a full body washdown to prevent injury after being exposed to hazardous materials. The eye wash flushes irritants from eyes to treat and prevent eye injuries.

These stations are used in labs, chemical plants, paper mills, and other environments where there are potentially harmful chemicals or materials. They allow fast emergency access when installed near areas where harmful chemicals or materials are being handled.

### Specifications

| Model                                          | EEWS-311Y                                                                                                                           |
|------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Material                                       | Stainless Steel 304                                                                                                                 |
| Surface finishing                              | glossy epoxy coated                                                                                                                 |
| Usage                                          | drenching body and rinsing faces / eyes can be operated separately or simultaneously                                                |
| Shower & eye wash switch                       | SS304 ball valve                                                                                                                    |
| Shower head                                    | spinning-formed with curled rim, diameter 250 mm                                                                                    |
| Pipe diameter                                  | 42 mm                                                                                                                               |
| Nominal pressure                               | 1.0 Mpa                                                                                                                             |
| Working pressure                               | 0.2-0.4 Mpa                                                                                                                         |
| Testing pressure                               | 1.5 Mpa                                                                                                                             |
| Temperature requirement on working environment | 0°C~40°C                                                                                                                            |
| Flow rate of body shower                       | ≥76 L/min                                                                                                                           |
| Flow rate of eye/face wash                     | ≥11.4 L/min                                                                                                                         |
| Flow rate of eye wash                          | ≥1.5 L/min                                                                                                                          |
| Eyewash bowl features                          | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing                                    |
| Eyewash bowl cover                             | SS304, combined eye wash switch and bowl cover in one, performs better on dust prevention                                           |
| Spray head feature                             | patented design, each spray head equips with one water – flow control valve                                                         |
| Inlet thread                                   | Rc 1",female                                                                                                                        |
| Outlet thread                                  | Rc1-½",female                                                                                                                       |
| Inlet height ( from above the floor )          | 1540 mm                                                                                                                             |
| Outlet height ( from above the floor )         | 100 mm                                                                                                                              |
| Distance between spray heads                   | 170 mm                                                                                                                              |
| Water pattern coverage                         | water pattern coverage at the height of 1524 mm above floor,the water pattern covers a circular area of at least 510 mm in diameter |
| Package Dimension (W*D*H) (mm)                 | 1020*370*210mm                                                                                                                      |
| G.W.(kg)                                       | 2Kg                                                                                                                                 |

Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Eye/face wash and shower combination station

## EEWS-312

### Description

- The inlet parts and outlet parts are customizable
- Shutoff valve and filter are proposed to be equipped on the water-supply end

### Specifications



| Model                                          | EEWS-312                                                                                                     |
|------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Material                                       | Stainless Steel 316                                                                                          |
| Surface finishing                              | sanded                                                                                                       |
| Assembling feature                             | the“Union”allows easier pipe connection and disconnection                                                    |
| Usage                                          | drenching body and rinsing faces / eyes can be operated separately or simultaneously                         |
| Shower & eye wash switch                       | SS304 ball valve                                                                                             |
| Shower head                                    | spinning-formed with curled rim, diameter 250 mm                                                             |
| Pipe diameter                                  | 42 mm                                                                                                        |
| Nominal pressure                               | 1.0 Mpa                                                                                                      |
| Working pressure                               | 0.2~0.4 Mpa                                                                                                  |
| Testing pressure                               | 1.5 Mpa                                                                                                      |
| Temperature requirement on working environment | 0°C~40°C                                                                                                     |
| Flow rate of body shower                       | ≥76 L/min                                                                                                    |
| Flow rate of eye/face wash                     | ≥11.4 L/min                                                                                                  |
| Flow rate of eye wash                          | ≥1.5 L/min                                                                                                   |
| Eyewash bowl features                          | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing             |
| Eyewash bowl cover                             | SS304, combined eye wash switch and bowl cover in one, performs better on dust prevention                    |
| Spray head feature                             | patented design, each spray head equips with one water – flow control valve                                  |
| Inlet thread                                   | Rc 1”,female                                                                                                 |
| Outlet thread                                  | Rc1-1/4”,female                                                                                              |
| Inlet height ( from above the floor )          | 1540 mm                                                                                                      |
| Outlet height ( from above the floor )         | 100 mm                                                                                                       |
| Distance between spray heads                   | 170 mm                                                                                                       |
| Water pattern coverage                         | at the height of 1524 mm above floor,the water pattern covers a circular area of at least 510 mm in diameter |

Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Eye/Face Wash and Shower Combination Station

## EEWS-313

### Description

- The inlet parts and outlet parts are customizable
- Shutoff valve and filter are proposed to be equipped on the water-supply end

### Specifications



| Model                                          | EEWS-313                                                                                                     |
|------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Material                                       | Stainless Steel 304                                                                                          |
| Surface finishing                              | sanded                                                                                                       |
| Assembling feature                             | The“Union”allows easier pipe connection and disconnection                                                    |
| Usage                                          | Drenching body and rinsing faces / eyes can be operated separately or simultaneously                         |
| Shower & eye wash switch                       | SS304 ball valve                                                                                             |
| Shower head                                    | Spinning-formed with curled rim, diameter 250 mm                                                             |
| Pipe diameter                                  | 48 mm                                                                                                        |
| Nominal pressure                               | 1.0 Mpa                                                                                                      |
| working pressure                               | 0.2~0.4 Mpa                                                                                                  |
| Testing pressure                               | 1.5 Mpa                                                                                                      |
| Temperature requirement on working environment | 0°C~40°C                                                                                                     |
| Flow rate of body shower                       | ≥76 L/min                                                                                                    |
| Flow rate of eye/face wash                     | ≥11.4 L/min                                                                                                  |
| Flow rate of eye wash                          | ≥1.5 L/min                                                                                                   |
| Eyewash bowl features                          | ABS bowl, transparent PC bowl cover                                                                          |
| Spray head feature                             | Patented design, each spray head equips with one water – flow control valve                                  |
| Inlet thread                                   | Rc 1”,female                                                                                                 |
| Outlet thread                                  | Rc 1”,female                                                                                                 |
| Inlet height ( from above the floor )          | 1500 mm                                                                                                      |
| Outlet height ( from above the floor )         | 95 mm                                                                                                        |
| Distance between spray heads                   | 170 mm                                                                                                       |
| water pattern coverage                         | At the height of 1524 mm above floor,the water pattern covers a circular area of at least 510 mm in diameter |


Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Eye/Face wash and Shower combination station

## EEWS-320

### Description

- Material: Stainless Steel 304
- Surface finishing: Fine-polished / glossy epoxy coated
- Assembling feature: The“Union”allows easier pipe connection and disconnection
- Shower & eye wash switch : SS304 ball valve
- Usage : Drenching body and rinsing faces / eyes can be operated separately or simultaneously
- Notes : the inlet parts and outlet parts are customizable; Shut off valve and filter are proposed to be equipped on the water-supply end stainless steel – made foot treadle is optional as eye wash switch

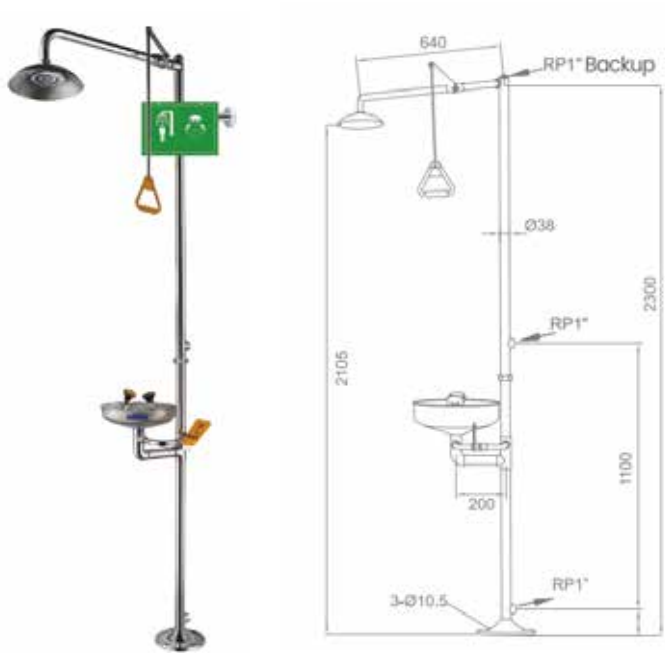

### Specifications

| Model                                  | EEWS-320                                                                                                      |
|----------------------------------------|---------------------------------------------------------------------------------------------------------------|
| Shower head                            | spinning-formed with curled rim, diameter 250 mm                                                              |
| Pipe diameter                          | 38 mm                                                                                                         |
| Nominal pressure                       | 1.0 Mpa                                                                                                       |
| Working pressure                       | 0.2~0.4 Mpa                                                                                                   |
| Testing pressure                       | 1.5 Mpa                                                                                                       |
| Temperature on working environment     | 0°C~40°C                                                                                                      |
| Flow rate of body shower               | ≥76 L/min                                                                                                     |
| Flow rate of eye/face wash             | ≥11.4 L/min                                                                                                   |
| Flow rate of eye wash                  | ≥1.5 L/min                                                                                                    |
| Eyewash bowl features                  | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing              |
| Dust cover feature                     | integrated with the spray head ( not connected by chain )                                                     |
| Spray head feature                     | patented design, each spray head equips with one water-flow control valve                                     |
| Inlet thread                           | Rp1" ,female                                                                                                  |
| Outlet thread                          | Rp1" ,female                                                                                                  |
| Inlet height ( from above the floor )  | 1186 mm                                                                                                       |
| Outlet height ( from above the floor ) | 86 mm                                                                                                         |
| Distance between spray heads           | 170 mm                                                                                                        |
| Water pattern coverage                 | at the height of 1524 mm above floor, the water pattern covers a circular area of at least 510 mm in diameter |

Optional anti-scalding valve:For details, please refer to the last page of the color page.


# Eye/Face Wash and Shower Combination Station

## EEWS-323

### Description

- The inlet parts and outlet parts are customizable
- Shutoff valve and filter are proposed to be equipped on the water-supply end

### Specifications

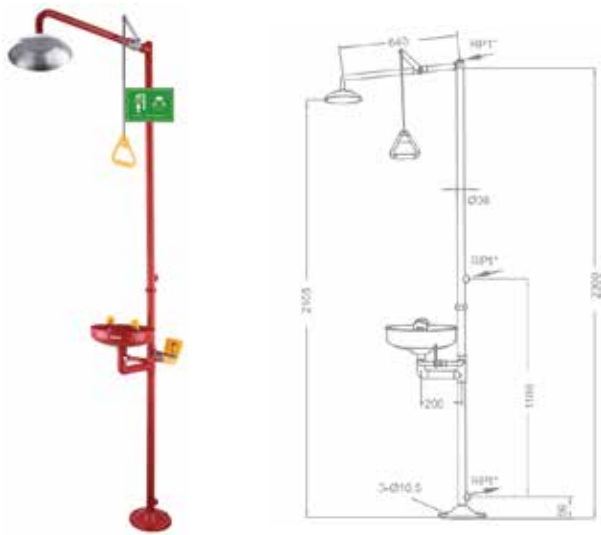

| Model                                          | EEWS-323                                                                                                     |
|------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Material                                       | Stainless Steel 304                                                                                          |
| Surface finishing                              | sanded                                                                                                       |
| Assembling feature                             | The“Union”allows easier pipe connection and disconnection                                                    |
| Usage                                          | Drenching body and rinsing faces / eyes can be operated separately or simultaneously                         |
| Shower & eye wash switch                       | SS304 ball valve                                                                                             |
| Shower head                                    | Spinning-formed with curled rim, diameter 250 mm                                                             |
| Pipe diameter                                  | 48 mm                                                                                                        |
| Nominal pressure                               | 1.0 Mpa                                                                                                      |
| working pressure                               | 0.2~0.4 Mpa                                                                                                  |
| Testing pressure                               | 1.5 Mpa                                                                                                      |
| Temperature requirement on working environment | 0°C~40°C                                                                                                     |
| Flow rate of body shower                       | ≥76 L/min                                                                                                    |
| Flow rate of eye/face wash                     | ≥11.4 L/min                                                                                                  |
| Flow rate of eye wash                          | ≥1.5 L/min                                                                                                   |
| Eyewash bowl features                          | ABS bowl, transparent PC bowl cover                                                                          |
| Spray head feature                             | Patented design, each spray head equips with one water – flow control valve                                  |
| Inlet thread                                   | Rc 1",female                                                                                                 |
| Outlet thread                                  | Rc 1",female                                                                                                 |
| Inlet height ( from above the floor )          | 1500 mm                                                                                                      |
| Outlet height ( from above the floor )         | 95 mm                                                                                                        |
| Distance between spray heads                   | 170 mm                                                                                                       |
| water pattern coverage                         | At the height of 1524 mm above floor,the water pattern covers a circular area of at least 510 mm in diameter |

Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Eye/Face wash and Shower combination station

EEWS-323Y



## Description

- The inlet parts and outlet parts are customizable
- Shutoff valve and filter are proposed to be equipped on the water-supply end
- Stainless steel – made foot treadle is optional as eye wash switch

## Specifications

| Model                                  | EEWS-323Y                                                                                                    |
|----------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Material                               | Stainless Steel 304                                                                                          |
| Surface finishing                      | glossy epoxy coated                                                                                          |
| Assembling feature                     | the"Union"allows easier pipe connection and disconnection                                                    |
| Usage                                  | drenching body and rinsing faces / eyes can be operated separately or simultaneously                         |
| Shower & eye wash switch               | SS304 ball valve                                                                                             |
| Shower head                            | spinning-formed with curled rim, diameter 250 mm                                                             |
| Pipe diameter                          | 38 mm                                                                                                        |
| Eyewash bowl features                  | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing             |
| Dust cover feature                     | integrated with the spray head ( not connected by chain )                                                    |
| Inlet thread                           | Rp1" ,female                                                                                                 |
| Outlet thread                          | Rp1" ,female                                                                                                 |
| Inlet height ( from above the floor )  | 1186mm                                                                                                       |
| Outlet height ( from above the floor ) | 86mm                                                                                                         |
| Distance between spray heads           | 170 mm                                                                                                       |
| Water pattern coverage                 | At the height of 1524 mm above floor,the water pattern covers a circular area of at least 510 mm in diameter |

Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Eye/Face Wash and Shower Combination Station

EEWS-324



## Description

- The inlet parts and outlet parts are customizable
- Shutoff valve and filter are proposed to be equipped on the water-supply end

## Specifications

| Model                                          | EEWS-324                                                                                                                            |
|------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Material                                       | Stainless Steel 304                                                                                                                 |
| Surface finishing                              | glossy epoxy coated                                                                                                                 |
| Usage                                          | single-nozzle hand-held shower is optional                                                                                          |
| Shower & eye wash switch                       | SS304 ball valve                                                                                                                    |
| Shower hea                                     | spinning-formed with curled rim, diameter 250 mm                                                                                    |
| Pipe diameter                                  | 38 mm                                                                                                                               |
| Nominal pressure                               | 1.0 Mpa                                                                                                                             |
| Working pressure                               | 0.2-0.4 Mpa                                                                                                                         |
| Testing pressure                               | 1.5 Mpa                                                                                                                             |
| Temperature requirement on working environment | 0°C~40°C                                                                                                                            |
| Flow rate of body shower                       | ≥76 L/min                                                                                                                           |
| Inlet thread                                   | Rp 1",female                                                                                                                        |
| Inlet height ( from above the floor )          | 1190 mm                                                                                                                             |
| Water pattern coverage                         | water pattern coverage at the height of 1524 mm above floor,the water pattern covers a circular area of at least 510 mm in diameter |

Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Eye/Face wash and Shower combination station

## EEWS-300

### Description

- Material: Stainless Steel 304
- Surface finishing: fine-polished / glossy epoxy coated
- Assembling feature: the“Union”allows easier pipe connection and disconnection
- Shower & eye wash switch: SS304 ball valve
- Usage: drenching body and rinsing faces / eyes can be operated separately or simultaneously
- Notes : the inlet parts and outlet parts are customizable; Shut off valve and filter are proposed to be equipped on the water-supply end stainless steel – made foot treadle is optional as eye wash switch



### Specifications

| Model                                  | EEWS-300                                                                                                     |
|----------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Shower head                            | spinning-formed with curled rim, diameter 250 mm                                                             |
| Pipe diameter                          | 38 mm                                                                                                        |
| Nominal pressure                       | 1.0 Mpa                                                                                                      |
| Working pressure                       | 0.2~0.4 Mpa                                                                                                  |
| Testing pressure                       | 1.5 Mpa                                                                                                      |
| Temperature on working environment     | 0°C~40°C                                                                                                     |
| Flow rate of body shower               | ≥76 L/min                                                                                                    |
| Flow rate of eye/face wash             | ≥11.4 L/min                                                                                                  |
| Flow rate of eye wash                  | ≥1.5 L/min                                                                                                   |
| Eyewash bowl features                  | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing             |
| Dust cover feature                     | integrated with the spray head ( not connected by chain )                                                    |
| Spray head feature                     | patented design, each spray head equips with one water-flow control valve                                    |
| Inlet thread                           | Rp1\"                                                                                                        |
| Outlet thread                          | Rp1\"                                                                                                        |
| Inlet height ( from above the floor )  | 1186 mm                                                                                                      |
| Outlet height ( from above the floor ) | 86 mm                                                                                                        |
| Distance between spray heads           | 170 mm                                                                                                       |
| Water pattern coverage                 | at the height of 1524 mm above floor, the waterpattern covers a circular area of at least 510 mm in diameter |


Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Eye/Face Wash and Shower Combination Station

## EEWS-301

### Description

- Material : Stainless Steel 304
- Surface finishing: fine-polished / glossy epoxy coated
- Assembling feature : the“Union”allows easier pipe connection and disconnection
- Shower & eye wash switch : SS304 ball valve
- Usage : drenching body and rinsing faces / eyes can be operated separately or simultaneously
- Notes : the inlet parts and outlet parts are customizable; shutoff valve and filter are proposed to be equipped on the water-supply end stainless steel – made foot treadle as eye wash switch.

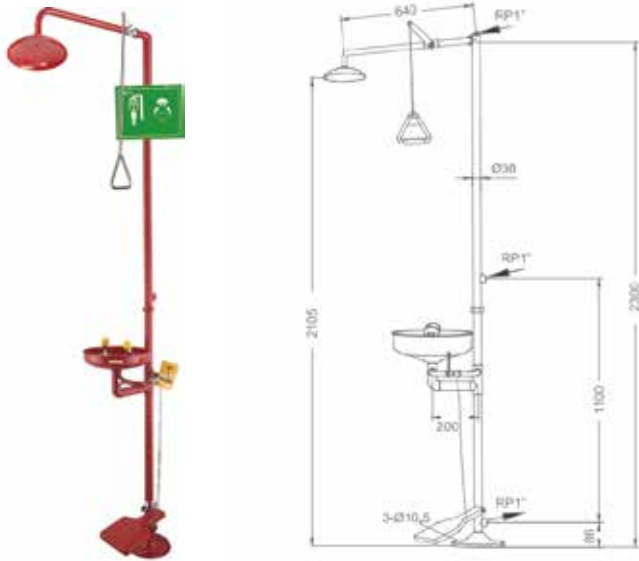

### Specifications

| Model                                  | EEWS-301                                                                                                     |
|----------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Shower head                            | spinning-formed with curled rim, diameter 250 mm                                                             |
| Pipe diameter                          | 38 mm                                                                                                        |
| Nominal pressure                       | 1.0 Mpa                                                                                                      |
| Working pressure                       | 0.2~0.4 Mpa                                                                                                  |
| Testing pressure                       | 1.5 Mpa                                                                                                      |
| Temperature on working environment     | 0°C~40°C                                                                                                     |
| Flow rate of body shower               | ≥76 L/min                                                                                                    |
| Flow rate of eye/face wash             | ≥11.4 L/min                                                                                                  |
| Flow rate of eye wash                  | ≥1.5 L/min                                                                                                   |
| Eyewash bowl features                  | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing             |
| Dust cover feature                     | integrated with the spray head ( not connected by chain )                                                    |
| Spray head feature                     | patented design, each spray head equips with one water-flow control valve                                    |
| Inlet thread                           | Rp1\"                                                                                                        |
| Outlet thread                          | Rp1\"                                                                                                        |
| Inlet height ( from above the floor )  | 1186 mm                                                                                                      |
| Outlet height ( from above the floor ) | 86 mm                                                                                                        |
| Distance between spray heads           | 170 mm                                                                                                       |
| Water pattern coverage                 | at the height of 1524 mm above floor, the waterpattern covers a circular area of at least 510 mm in diameter |

Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Eye/Face wash and shower combination station

## EEWS-302

### Application

As first aid security equipment, emergency shower and eye wash units are widely used at working area and laboratories in the fields of pharmaceutical, chemical, petrochemical, electronics, semi-conductor industries, where danger tends to occur unexpectedly. In the event of an accident of chemical or poison spill or fire, this equipment delivers water to rinse contaminants from a user’s body, face,and eyes. So as to minimize damage and harm to injured worker.

### Specifications

| Model                                          | EEWS-302                                                                                                      |
|------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| Material                                       | Stainless Steel 304                                                                                           |
| Surface finishing                              | Fine-polished, which makes the pipe surface performs better on corrosion resistance                           |
| Assembling feature                             | Pipes connected by innovative inserting & turning                                                             |
| Usage                                          | Drenching body and rinsing faces / eyes can be operated separately or simultaneously                          |
| Shower & eye wash switch                       | SS304 ball valve                                                                                              |
| Shower head                                    | Spinning-formed with curled rim, diameter 250 mm                                                              |
| Pipe diameter                                  | 38 mm                                                                                                         |
| Nominal pressure                               | 1.0 Mpa                                                                                                       |
| working pressure                               | 0.2-0.4 Mpa                                                                                                   |
| Testing pressure                               | 1.5 Mpa                                                                                                       |
| Temperature requirement on working environment | 0°C~40°C                                                                                                      |
| Flow rate of body shower                       | ≥76 L/min                                                                                                     |
| Flow rate of eye/face wash                     | ≥11.4 L/min                                                                                                   |
| Flow rate of eye wash                          | ≥1.5 L/min                                                                                                    |
| Eyewash bowl features                          | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing              |
| Dust cover                                     | integrated with the spray head ( not connected by chain ),and easily removed by water flow.                   |
| Spray head feature                             | patented design, each spray head equips with one water-flow control valve                                     |
| Inlet thread                                   | Rp 1",female                                                                                                  |
| Outlet thread                                  | Rp 1",female                                                                                                  |
| Inlet height ( from above the floor )          | 1201 mm                                                                                                       |
| Outlet height ( from above the floor )         | 86 mm                                                                                                         |
| Distance between spray heads                   | 170 mm                                                                                                        |
| water pattern coverage                         | At the height of 1524 mm above floor, the water pattern covers a circular area of at least 510 mm in diameter |



### Features:

- Emergency shower & Eye Wash can be designed and sampled, also offers customers different colors as customers’ request.
- Emergency forest eye washer adopts advanced American technology, conforms to American standard ANSI Z358.1-2014, and the products are produced according to GB/T 38144.2-2019 standard., which sets standard for length, height, flow volume and spray area, etc.,for emergency equipment.
- Eye wash in ergonomically designed with two spray heads, height and angle of the heads offer face most comfort.
- The specially designed spray holes soften water spray and protect eyes effectively.

### Notes



the inlet parts and outlet parts are customizable; shutoff valve and filter are proposed to be equipped on the water-supply end stainless steel – made foot treadle is optional as eye wash switch

Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Eye/Face wash and Shower combination station

## EEWS-305



### Description

- The inlet parts and outlet parts are customizable
- Shutoff valve and filter are proposed to be equipped on the water-supply end
- Stainless steel – made foot treadle is optional as eye wash switch.

### Specifications

| Model                                          | EEWS-305                                                                                                     |
|------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Material                                       | Stainless Steel 304                                                                                          |
| Surface finishing                              | fine-polished, which makes the pipe surface performs better on corrosion resistance                          |
| Usage                                          | drenching body and rinsing faces / eyes can be operated separately or simultaneously                         |
| Shower & eye wash switch                       | SS304 ball valve                                                                                             |
| Shower head                                    | Spinning-formed with curled rim, diameter 250 mm                                                             |
| Pipe diameter                                  | 42 mm                                                                                                        |
| Nominal pressure                               | 1.0 Mpa                                                                                                      |
| Working pressure                               | 0.2~0.4 Mpa                                                                                                  |
| Testing pressure                               | 1.5 Mpa                                                                                                      |
| Temperature requirement on working environment | 0°C~40°C                                                                                                     |
| Flow rate of body shower                       | ≥76 L/min                                                                                                    |
| Flow rate of eye/face wash                     | ≥11.4 L/min                                                                                                  |
| Flow rate of eye wash                          | ≥1.5 L/min                                                                                                   |
| Eyewash bowl features                          | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing             |
| Dust cover                                     | integrated with the spray head ( not connected by chain ) Spray head feature                                 |
| Inlet thread                                   | Rc 1",female                                                                                                 |
| Outlet thread                                  | Rc1-1/4",female                                                                                              |
| Inlet height ( from above the floor )          | 1540 mm                                                                                                      |
| Outlet height ( from above the floor )         | 100 mm                                                                                                       |
| Distance between spray heads                   | 170 mm                                                                                                       |
| Water pattern coverage                         | At the height of 1524 mm above floor,the water pattern covers a circular area of at least 510 mm in diameter |

Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Anti-freezing emergency shower & eye wash

## EEWS-307



### Description

- The inlet parts and outlet parts are customizable; shutoff valve and filter are proposed to be equipped on the water-supply end
- The shower, as well as the waste-water collecting sink are customizable

### Specifications

| Model                                          | EEWS-307                                                                                         |
|------------------------------------------------|--------------------------------------------------------------------------------------------------|
| Material                                       | Stainless Steel 304 / PP                                                                         |
| Product features                               | equips with waste-water collecting sink                                                          |
| Surface finishing                              | fine-polished, which makes the pipe surface performs better on corrosion resistance              |
| Usage                                          | drenching body and rinsing faces / eyes can be operated separately or simultaneously             |
| Shower & eye wash switch                       | SS304 ball valve                                                                                 |
| Shower head                                    | spinning-formed with curled rim, diameter 250 mm                                                 |
| Pipe diameter                                  | 38 mm                                                                                            |
| Nominal pressure                               | 1.0 Mpa                                                                                          |
| Working pressure                               | 0.2~0.4 Mpa                                                                                      |
| Testing pressure                               | 1.5 Mpa                                                                                          |
| Temperature requirement on working environment | 0°C~40°C                                                                                         |
| Flow rate of body shower                       | ≥76 L/min                                                                                        |
| Flow rate of eye/face wash                     | ≥11.4 L/min                                                                                      |
| Flow rate of eye wash                          | ≥1.5 L/min                                                                                       |
| Eyewash bowl features                          | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing |
| Dust cover feature                             | integrated with the spray head ( not connected by chain )                                        |
| Inlet thread                                   | patented design, each spray head equips with one water-flow control valve                        |
| Outlet thread                                  | Rp1" ,female                                                                                     |
| Inlet height ( from above the floor )          | Rp1" ,female                                                                                     |
| Outlet height ( from above the floor )         | 1186 mm                                                                                          |
| Distance between spray heads                   | 86mm                                                                                             |
| 170 mm                                         | 170 mm                                                                                           |
| Size of waste-water collecting sink            | 1000 mm ( length ) X 1000 mm ( width ) X 150 mm ( depth )                                        |


Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Anti-freezing emergency shower & eye wash

EEWS-308

### Product features:

- Adopt the new patented eye wash spray head.  
  
The outlet water flow of the eye wash spray head is controlled by the flow regulation structure inside the spray head,it has been debugged and corrected before leaving the factory.  
  
If the water pressure on site changes, it can be adjusted by itself.
  - The main water inlet valve is a special three-way ball valve.
  - The water inlet is opened (opening angle 90°), the outlet is closed;
  - Move the switch handle upward, the water inlet is closed, the outlet is opened, and the accumulated water in the pipeline is automatically emptied.
  - The pipeline is equipped with a water leakage hole to empty the residual water in the eye nozzle, which is conducive to the cleaning and anti-freezing of the pipeline (a part of the water is drained into the sewer pipe during eye washing without affecting the use effect.).
  - The eye wash has the function of manual emptying and anti-freezing.  
It is suitable for use in areas where the temperature is below 0°C and in environments with hot water supply.
- ★ Notes : The inlet part and outlet part are customizable;shut off valve and filter are proposed to be equipped on the water-supply end.

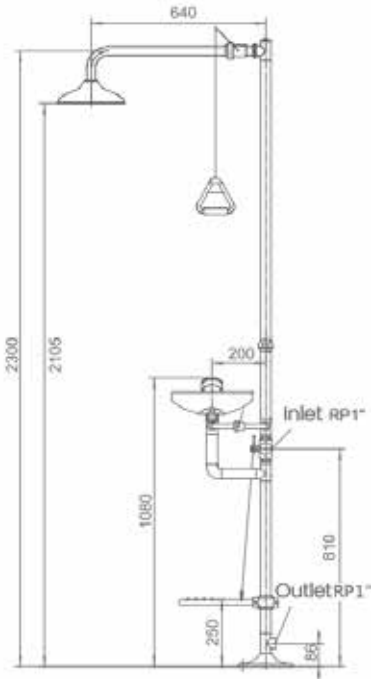

### Random accessories (packing accessories)

| Model                        | EEWS-308                                                                                         |
|------------------------------|--------------------------------------------------------------------------------------------------|
| Material                     | SS304                                                                                            |
| Surface finishing            | fine-polished, which makes the pipe surface performs better on corrosion resistance              |
| Installation characteristics | the"Union"allows easier pipe connection and disconnection                                        |
| Usage                        | Shower+Eye wash+Emptying                                                                         |
| Appropriate area             | Low cold areas in the North                                                                      |
| Switch ball valve            | SS304 ball valve                                                                                 |
| Shower head                  | spinning-formed with curled rim, diameter 250 mm                                                 |
| Pipe diameter                | 38mm                                                                                             |
| Eyewash bowl features        | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing |
| Dust cover                   | integrated with the spray head ( not connected by chain )                                        |
| Spray head feature           | patented design, each spray head equips with one water-flow control valve                        |
| Inlet thread                 | Rp1"                                                                                             |
| Outlet thread                | Rp1"                                                                                             |
| Inlet height                 | 810mm                                                                                            |
| Outlet height                | 86mm                                                                                             |

Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Anti-freezing emergency shower & eye wash

## EEWS-321


### Description

- Combination eye wash stations combine a shower and an eye wash in a single unit. The shower provides a full body washdown to prevent injury after being exposed to hazardous materials. The eye wash flushes irritants from eyes to treat and prevent eye injuries.
- These stations are used in labs, chemical plants, paper mills, and other environments where there are potentially harmful chemicals or materials. They allow fast emergency access when installed near areas where harmful chemicals or materials are being handled.
- ★ Notes : the inlet parts and outlet parts are customizable; shutoff valve and filter are proposed to be equipped on the water-supply end; stainless steel – made foot treadle is optional as eye wash switch

### Specifications

| EEWS-321                                       |                                                                                                              |
|------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Material                                       | Stainless Steel common and ABS                                                                               |
| Surface finishing                              | glossy epoxy coated                                                                                          |
| Usage                                          | drenching body and rinsing faces / eyes can be operated separately or simultaneously                         |
| Shower & eye wash switch                       | SS304 ball valve                                                                                             |
| Shower head and eye wash bowl                  | ABS, diameter 250 mm                                                                                         |
| Pipe diameter                                  | 42 mm                                                                                                        |
| Nominal pressure                               | 1.0 Mpa                                                                                                      |
| Working pressure                               | 0.2-0.4 Mpa                                                                                                  |
| Testing pressure                               | 1.5 Mpa                                                                                                      |
| Temperature requirement on working environment | 0°C-40°C                                                                                                     |
| Flow rate of body shower                       | ≥76 L/min                                                                                                    |
| Flow rate of eye/face wash                     | ≥11.4 L/min                                                                                                  |
| Flow rate of eye wash                          | ≥1.5 L/min                                                                                                   |
| Dust cover                                     | integrated with the spray head ( not connected by chain )                                                    |
| Inlet thread                                   | Rp 1",female                                                                                                 |
| Outlet thread                                  | Rp1" ,female                                                                                                 |
| Inlet height ( from above the floor )          | 1500 mm                                                                                                      |
| Outlet height ( from above the floor )         | 130 mm                                                                                                       |
| Distance between spray heads                   | 170 mm                                                                                                       |
| Foot pedal (Optional)                          |                                                                                                              |
| Water pattern coverage                         | at the height of 1524 mm above floor,the water pattern covers a circular area of at least 510 mm in diameter |

Optional anti-scalding valve:For details, please refer to the last page of the color page.

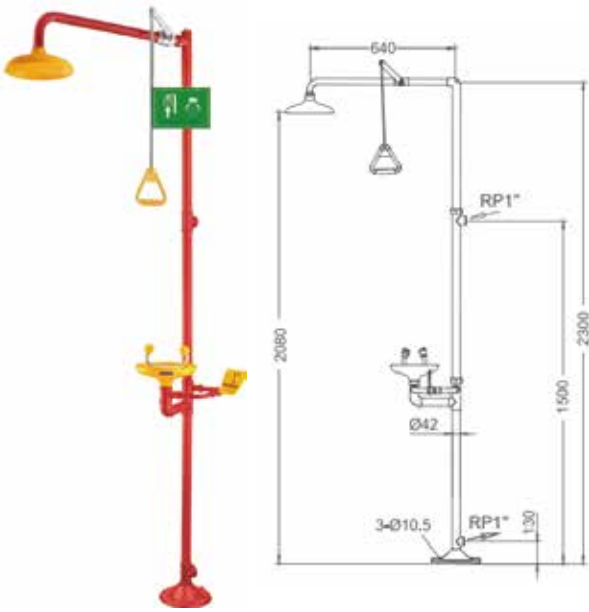

# Anti-freezing emergency shower & eye wash

## EEWS-326

### Description

- 1.The inlet part and outlet part are customizable;shut off valve and filter are proposed to be equipped on the water-supply end
- 2.This eye wash is an automatic emptying
- 3.Method of operation:
  - ① The person stands on the foot pedal of the eye wash, pushes away the hand push board, and pulls the lever downward 90°, the eye wash automatically gives water.
  - ② After use, hand push board, dust cover and pull rod are reset.
  - ③ When the person leaves the foot pedal, the outlet valve closes automatically, at the same time it can directly empty the accumulated water in the entire eyewash system pipeline to prevent freezing and ensure the normal use of the eyewash in freezing weather.No need to do the second emptying valve action, convenient and fast.



### Specifications

| Model                       | EEWS-326                                                                                         |
|-----------------------------|--------------------------------------------------------------------------------------------------|
| Material                    | SS304                                                                                            |
| Surface finishing           | Fine-polished,high gloss epoxy powder coating                                                    |
| Features                    | The"Union" allows easier pipe connection and disconnection                                       |
| Usage                       | Shower+Eyewash+Automatic emptying                                                                |
| Appropriate area            | Low cold areas in the North                                                                      |
| Switch ball valve           | SS304 ball valve                                                                                 |
| Shower head                 | Spinning-formed with curled rim, diameter 250 mm                                                 |
| Pipe diameter               | 48mm                                                                                             |
| Eyewash bowl features       | 300 mm in diameter, vertical bowl-wall design, allows better water collecting and anti-splashing |
| Dust cover                  | Integrated with the spray head ( not connected by chain )                                        |
| Spray head feature          | Patented design, each spray head equips with one water-flow control valve                        |
| Inlet thread                | Rp1-1/4"                                                                                         |
| Outlet thread               | G1"                                                                                              |
| Inlet height                | 105mm                                                                                            |
| Outlet height               | 105mm                                                                                            |
| Distance between spray head | 170mm                                                                                            |

Optional anti-scalding valve:For details, please refer to the last page of the color page.

# Vertical Emergency Eye Wash

EEWS-322A

## Description

- After the use of eye wash and face wash is stopped, the
- water in the pipeline will be drained automatically to achieve the purpose of anti-freezing.
- The inlet part and outlet part are customizable  
Shut off valve and filter are proposed to be equipped on the water-supply end.



## Specifications

| Model                           | EEWS-322A                                                |
|---------------------------------|----------------------------------------------------------|
| Materials                       | SS304                                                    |
| Surface finishing               | High brightness epoxy coating                            |
| Function                        | Eye and face washing                                     |
| Switching ball valve            | Two-piece ball valve                                     |
| Pipe diameter                   | 38mm                                                     |
| Nominal pressure                | 1.0Mpa                                                   |
| Working pressure                | 0.2-0.4Mpa                                               |
| Test pressure                   | 1.5Mpa                                                   |
| Working environment temperature | 0°C~40°C                                                 |
| Eye wash/face wash water flow   | ≥11.4 L/min                                              |
| Flow of eye wash                | ≥1.5 L/min                                               |
| Eye wash bowl                   | 300mm straight edge design, gather water, prevent splash |
| Dust cover                      | Integrated design of main body, not easy to lose         |
| Inner size                      | G1/2" male                                               |
| Outlet size                     | Rp1" female                                              |
| Inlet height                    | 753mm                                                    |
| Outlet height                   | 86mm                                                     |



# Optional anti-scalding valve

Optional Model

- EEWS-300
- EEWS-301
- EEWS-302
- EEWS-303
- EEWS-305
- EEWS-307
- EEWS-308
- EEWS-310
- EEWS-311
- EEWS-311Y
- EEWS-311R
- EEWS-312
- EEWS-313
- EEWS-320
- EEWS-321
- EEWS-323
- EEWS-323Y
- EEWS-324
- EEWS-325
- EEWS-326



Description

- The anti-scalding function of the eyewash can be customized. This anti-scalding valve is the main accessory, and a small part of the structure of the eyewash needs to be changed.

Working principle of anti-scalding valve

A thermal element is installed at the mixing outlet of the constant temperature water mixing valve, which uses the characteristics of the temperature sensing element to promote the movement of the valve core in the valve body and block or open the water inlets of cold and hot water. Turn on the hot water while blocking the cold water. When the temperature adjustment knob sets a certain temperature, no matter how the inlet temperature and pressure of cold and hot water change, the proportion of cold and hot water entering the outlet also changes, so that the outlet temperature remains constant. The temperature adjustment knob can be set arbitrarily within the specified temperature range of the product, and the water mixing valve will automatically maintain the outlet temperature.

Note: After setting the temperature, turn it on when the temperature is low and turn off when the temperature is high to avoid burns.

