

Infitek

PASS BOX



Infitek



Infitek



Infitek



Infitek



Infitek

Infitek

Infitek Co., Ltd.

TEL: +86-531-88982330

FAX: +86-531-88983691

Website: infitek.com

Email: info@infitek.com

Service: support@infitek.com

Address: Room 201, Building A, No.1 Qianwan 1st Road, Qianhai
Shenzhen-Hong Kong Cooperation Zone, Shenzhen (Settled in
Shenzhen Qianhai Business Secretary Co., Ltd.)

US Office

INFITEK INC.

522W RIVERSIDE AVE STE N,SPOKANE,WA 99201

EMAIL: INFO@INFITEK.COM



Pass Box

PB-600Z

Description

Pass box is one of the air purification equipment used in clean workshop. It is suitable for the transfer of goods between clean room and clean room or between clean room and non-clean room. After using this Pass box, the number of opening doors of clean room can be reduced effectively and the pollution degree of clean room can be reduced to the minimum.



Features

- ◆ The doors on both sides of the pass box have interlocking devices to realize the interlocking between the door and the door.
- ◆ The two doors can not be opened at the same time and play the role of airlock. Clean Pass box is placed in the object after closing the door the fan starts to blow which can effectively remove dust on the goods.
- ◆ The pass box is marked with ultraviolet sterilizing lamp which mainly plays the role of sterilization and disinfection.
- ◆ Customers can customize according to their needs.

Specification

Model	PB-600Z
Internal Dimension(W*D*H)	600*600*600 mm
External Dimension(W*D*H)	785*680*1100 mm
Package Dimension (W*D*H)	890*830*1280mm
Net weight(Kg)	210kg
Gross weight(Kg)	280kg

Pass Box

PB-800E

Description

Pass box is one of the air purification equipment used in clean workshop. It is suitable for the transfer of goods between clean room and clean room or between clean room and non-clean room. After using this pass box, the number of opening doors of clean room can be reduced effectively and the pollution degree of clean room can be reduced to the minimum.



Features

- ◆ The doors on both sides are equipped with electronic interlocking devices to realize door-to-door interlocking so that two doors cannot be opened at the same time, functioning as an airlock.
- ◆ The pass box is equipped with a UV sterilization lamp, which mainly plays the role of sterilization and disinfection.
- ◆ Pass box can be customized as an air shower pass box (clean pass box) according to its function. After placing the object inside and closing the door, it will automatically blow and shower, effectively removing dust from the goods.
- ◆ It can be customized as required.

Specification

Model	PB-800E
Internal Diameter (W*D*H)	800*800*800mm
External Diameter(W*D*H)	985*880*920mm
Interlock Mode	Electronic interlock
Electricity	220V, 50/60Hz
Net weight(Kg)	160kg
Gross weight(Kg)	180kg

Pass Box

PB-800M



Description


Pass box is one of the air purification equipment used in clean workshop. It is suitable for the transfer of goods between clean room and clean room or between clean room and non-clean room. After using this pass box, the number of opening doors of clean room can be reduced effectively and the pollution degree of clean room can be reduced to the minimum.

Feature

The doors on both sides are equipped with mechanical interlocking devices to realize door-to-door interlocking so that two doors cannot be opened at the same time, functioning as an airlock.

Features

- ◆ The pass box is equipped with a UV sterilization lamp, which mainly plays the role of sterilization and disinfection.
- ◆ Pass box can be customized as an air shower pass box (clean pass box) according to its function. After placing the object inside and closing the door, it will automatically blow and shower, effectively removing dust from the goods.
- ◆ It can be customized as required.

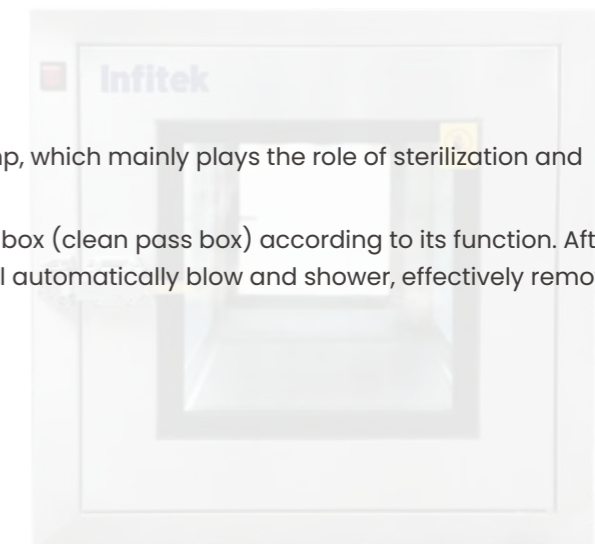

Specification

Model	PB-800M
Internal Diameter (W*D*H)	800*800*800mm
External Diameter(W*D*H)	985*880*920mm
Interlock Mode	Mechanical interlock
Electricity	220V, 50/60Hz
Net weight(Kg)	160kg
Gross weight(Kg)	180kg